

TonerKits

do-it-yourself toner refill kits

Refilling Instructions

Samsung MLT-D115L MLT-D115S

READ ALL INSTRUCTIONS BEFORE STARTING

1) Use our Universal Hole Tool or other melting device to make a 3/4 inch fill hole in the location shown. Do not allow any small bits of plastic to fall into the cartridge. If using our hole tool, read the operating instructions that came with it.

2) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the whole bottle of new toner. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge.

3) Once refilling is complete, clean the area around the fill hole and seal it with a two inch piece of the foil tape that came with the kit. Smooth the tape out well to make a leak proof seal.

Note: Replacing the chip is optional. If you prefer to replace the chip, skip step 4 & 5 for now and go to the next page for chip installation instructions. Come back to step 4 as the final step once the chip has been replaced. If you prefer to reset the printer from the menu, continue with steps 4 & 5.

4) Gently shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

5) FOR SINGLE FUNCTION PRINTERS: If the chip is not replaced, the printer will continue to indicate a toner low condition after the cartridge has been refilled but it will not interfere with the operation of the printer. No reset is necessary. FOR MULTI-FUNCTION PRINTERS: If the chip is not replaced, the printer will display a toner low light which must be cleared from the printer menu. It can easily be cleared by doing the following;

Select: SYSTEM SETUP > MAINTENIANCE > CLR EMPTY MSG

Once the empty message is cleared, the printer is ready to print.




3/4" hole cutter tip



make fill hole here

Fast Online Ordering Available 24/7 www.tonerkits.com

Optional chip replacement: Use a utility knife or wire cutters to cut off front corners where shown. Then use the knife to shave down the front edge where shown so the chip can slide out. Once that is completed, slide the old chip out and slide the new chip in. A small piece of tape may be required across each front corner to hold the chip in place. CAUTION - All chips are static sensitive and can be damaged if subjected to a static discharge.

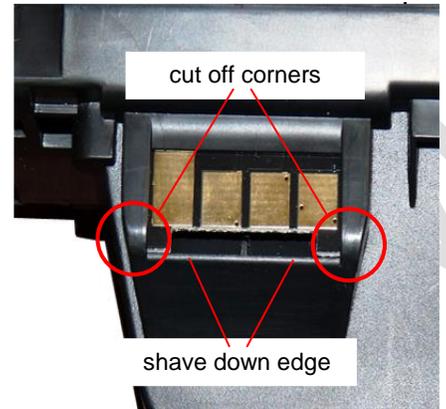

TONERKITS.S.C