

TonerKits

do-it-yourself toner refill kits

Request a detailed color copy of these instructions by email at support@tonerkits.com

Standard Refill Instructions

CLP310 sf2.0

Dell 3303012/3013/3014/3015

Dell 3303578/3579/3580/3581

Samsung CLT407S CLT4072S K/C/M/Y

Samsung CLT409S CLT4092S K/C/M/Y




- 1) Use a flat blade screwdriver to pry out the fill hole cover.
- 2) Use a pair of needle nose pliers to pull out the fill hole plug.
- 3) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the whole bottle of new toner. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge.

Note: A paper funnel may be necessary to prevent spillage. You can also try using your needle nose pliers to form the funnel cap on the bottle into an oval shape to better fit the fill hole.

- 4) Once refilling is complete, reinstall the fill hole plug.

5) Chip replacement: Clean off the surface of the original OEM chip. Then peel off the adhesive backing from the replacement chip and apply it directly over the original OEM chip (or blank if a starter cartridge). Look closely at the replacement chip for the "arrow" and word "up" so you don't accidentally apply it upside down. CAUTION - All chips are static sensitive and can be damaged if subjected to a static discharge.

- 6) Gently shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

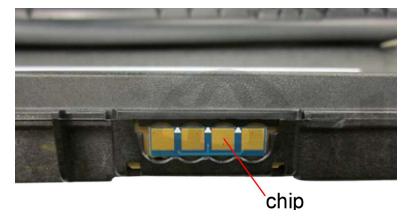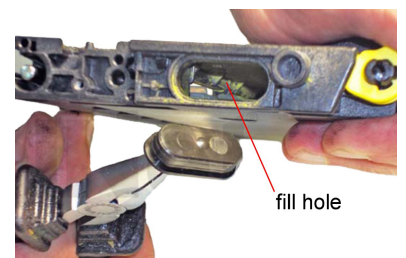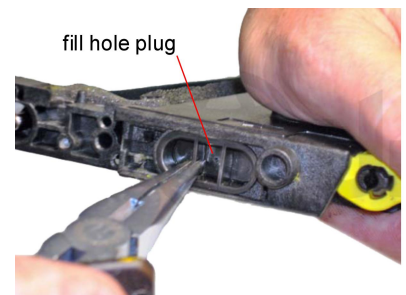

Fast Online Ordering 24/7...www.tonerkits.com