

TonerKits

do-it-yourself toner refill kits

Request a detailed color copy of these instructions by email at support@tonerkits.com

Standard Refill Instructions

HL1240 sf4.0

Brother TN430/460/530/560

1) Use a pair of pliers to remove the fill hole plug and dump out the bulk of the old toner through the fill hole (fig-1).



2) Set the cartridge on the work surface with the static roller facing up (fig-2). While holding the cartridge in that position, tap the bottom side on the work surface several times to get ALL the remaining old toner to fall to the bottom of the cartridge.

3) While continuing to hold the cartridge with the static roller facing up, dump out the remaining old toner. This is waste toner and must be completely removed or it will adversely affect the print quality.

4) Shake the toner bottle well to aerate and loosen the toner. Then remove the bottle cap and install the pouring spout and slowly pour in the new toner. Because of the design of this cartridge, we strongly recommend that the entire bottle be used when the cartridge is refilled. Once refilling is complete, reinstall the fill hole plug.

3) Check the static roller. If there are any fingerprints on it, simply wipe it gently with a clean cloth and blow off any lint or foreign matter that may be present.

4) Gently shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

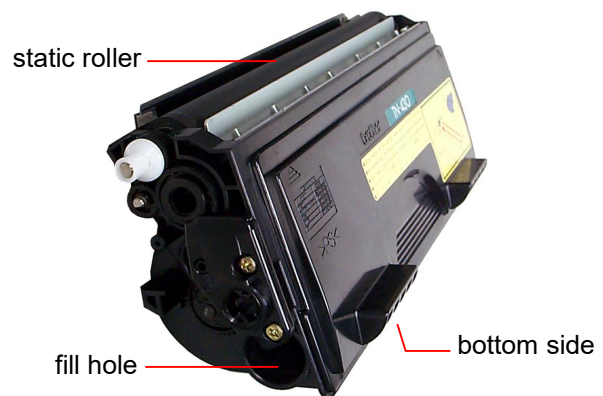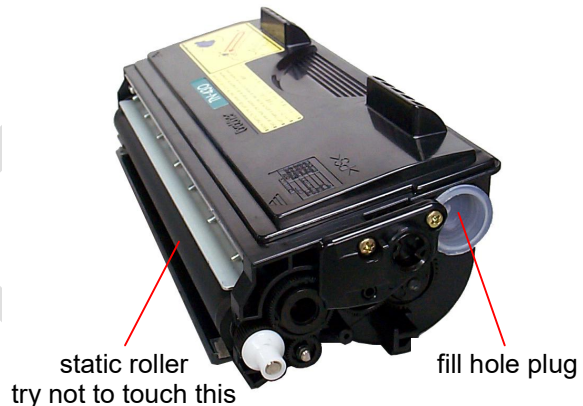

Fast Online Ordering Available 24/7

www.tonerkits.com