

TonerKits

do-it-yourself toner refill kits

Request a detailed color copy of these instructions by email at support@tonerkits.com

Standard Refill Instructions


ML1210 sf2.0

Samsung ML1210D1/D3 ML4500D1/D3

1) Use a pair of needle nose pliers or small flat blade screwdriver to pull or pry out the fill hole plug. Try to avoid touching the green photoconductive drum when handling the cartridge.

2) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout tightly. Slowly pour the toner into the cartridge. You may use all or part of the bottle as you see fit. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge. Once refilling is complete, reinstall the fill hole plug and side cover.

3) Gently shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

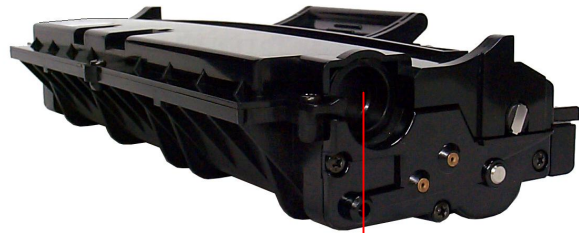

fill hole plug

Fast Online Ordering Available 24/7

www.tonerkits.com