

TonerKits

do-it-yourself toner refill kits


Request a detailed color copy of these instructions by email at support@tonerkits.com

Standard Refill Instructions


ML1640 sf3.0

Samsung MLTD108S MLTD1082S

1) Remove the two Phillips screws and gently pry off the side cover to expose the fill hole. Try to avoid touching the green photoconductive drum when handling the cartridge.

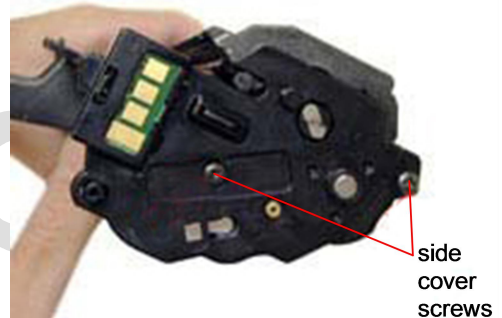


2) Use a pair of needle nose pliers or small flat blade screwdriver to pull or pry out the fill hole plug.

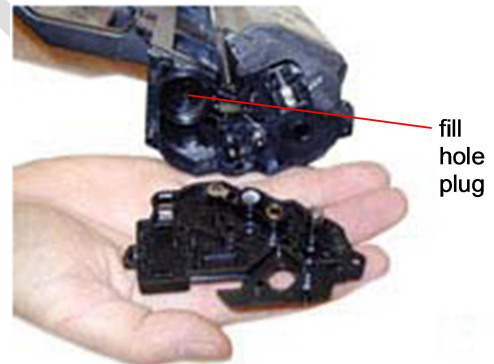

3) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the whole bottle of new toner. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge. Once refilling is complete, reinstall the fill hole plug.

4) Chip replacement: Install the reset chip the same way the old chip was installed in the location shown. Carefully pry out the chip housing and remove the old chip. Install the reset chip and snap the chip housing back in place. CAUTION - All chips are static sensitive and can be damaged if subjected to a static discharge.

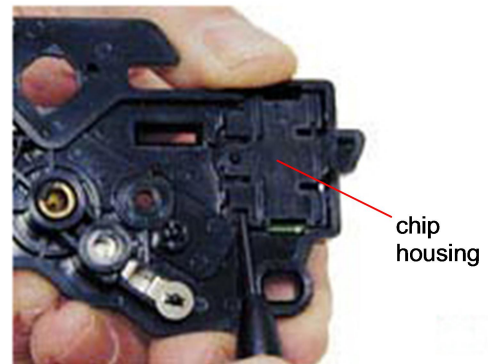

5) Reinstall the side cover and screws.

6) Shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

Fast Online Ordering Available 24/7
www.tonerkits.com