

TonerKits

do-it-yourself toner refill kits

Request a detailed color copy of these instructions by email at support@tonerkits.com

Standard Refill Instructions

ML1665 sf4.0

Samsung MLTD104S/X MLTD1042S/X

1) Cut off the heads of the three rivets on the chip side of the cartridge using an X-acto knife or box cutter knife (Fig. 1&2). Try to avoid touching the green photoconductive drum when handling the cartridge.

2) Install self-tapping screws (3 supplied with kit) in the three places where you just cut off the rivet heads (Fig. 3). If you have trouble getting the screws to start, drill or melt a small pilot hole about 1/8 inch deep. Be sure to remove any bits of plastic created by the screws so the drum isn't damaged by them.

3) Now that the side cover has been modified, remove the three screws you just installed and gently pry off the cover (Fig. 4).

4) Use a pair of needle nose pliers or small flat blade screwdriver to pull or pry out the fill hole plug (Fig. 5).

5) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the whole bottle of new toner. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge.

6) Chip replacement: Slide the old chip down and out as shown in Fig. 6 and slide in the new chip. CAUTION - All chips are static sensitive and can be damaged if subjected to a static discharge.

7) Reinstall the side cover and screws.

8) Shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

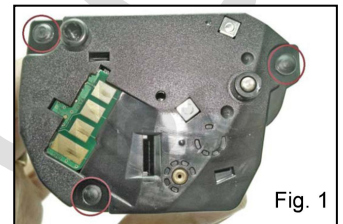


Fig. 1

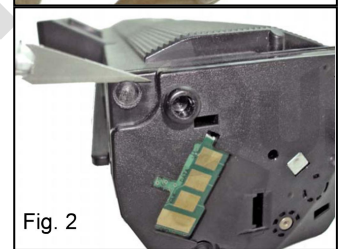


Fig. 2

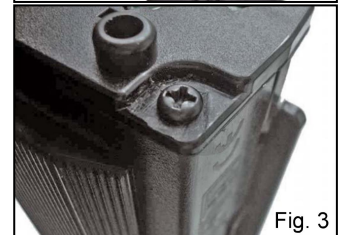


Fig. 3



Fig. 4



Fig. 5



Fig. 6

Fast Online Ordering Available 24/7...www.tonerkits.com