

TonerKits

do-it-yourself toner refill kits

Request a detailed color copy of these instructions by email at support@tonerkits.com

Standard Refill Instructions

ML2010 sf2.0



Samsung ML1610D1/D2 ML2010D1/D3

1) Remove the two Phillips screws and gently pry off the side cover to expose the fill hole. Try to avoid touching the green photoconductive drum when handling the cartridge.

2) Use a pair of needle nose pliers or small flat blade screwdriver to pull or pry out the fill hole plug.

3) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the whole bottle of new toner. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge. Once refilling is complete, reinstall the fill hole plug and side cover.

4) Shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

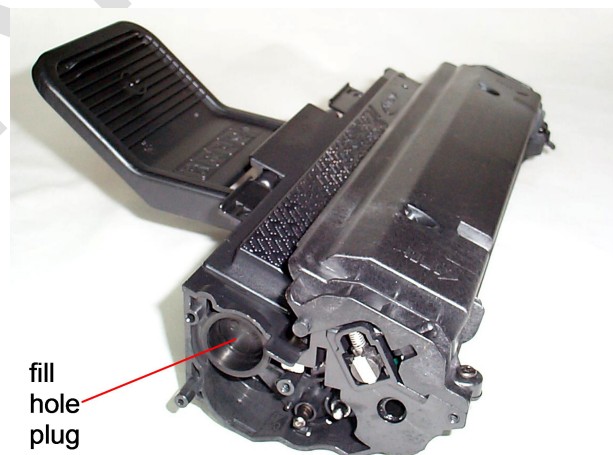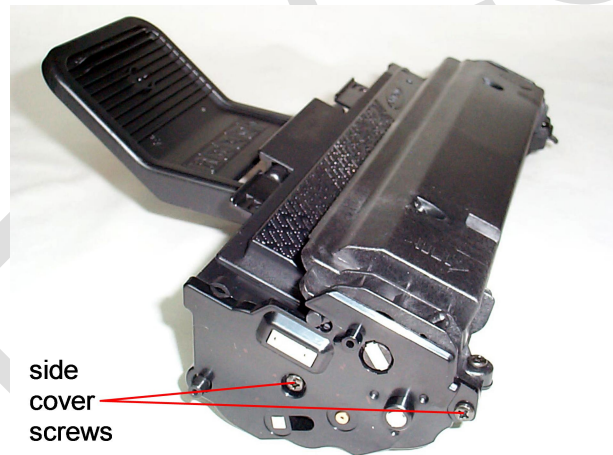

Fast Online Ordering Available 24/7
www.tonerkits.com