

# TonerKits

## do-it-yourself toner refill kits

Request a detailed color copy of these instructions by email at [support@tonerkits.com](mailto:support@tonerkits.com)

### QuikFil Instructions

ML2950 qf4.0

Dell 3317327/7328

Samsung MLTD103L/S MLTD115L/S

1) Use our Universal Hole Tool or other melting device to make a 3/4 inch fill hole in the location shown. Do not allow any small bits of plastic to fall into the cartridge. If using our hole tool, read the operating instructions that came with it.

2) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the whole bottle of new toner. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge.

3) Once refilling is complete, clean the area around the fill hole and seal it with a two inch piece of the foil tape that came with the kit. Smooth the tape out well to make a leak proof seal.

4) Chip replacement: Use a utility knife or wire cutters to cut off the front corners where shown. Then use the knife to shave down the front edge where shown so the chip can slide out. Once that is completed, slide the old chip out and slide the new chip in. A small piece of tape may be required across each front corner to hold the chip in place. **CAUTION** - All chips are static sensitive and can be damaged if subjected to a static discharge.


5) Gently shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.



3/4" hole cutter tip



make fill hole here

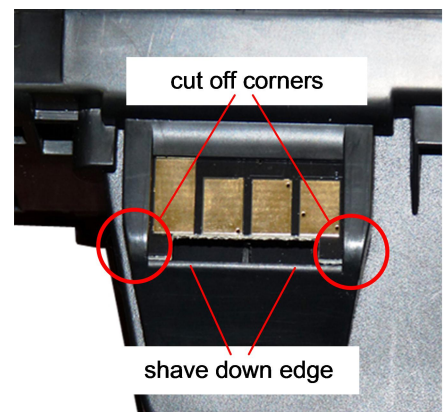

**Fast Online Ordering 24/7...[www.tonerkits.com](http://www.tonerkits.com)**