

TonerKits

do-it-yourself toner refill kits

Request a detailed color copy of these instructions by email at support@tonerkits.com

Standard Refill Instructions

PP1350 sf1.0

Dell 3109318/9319

Konica/Minolta 1710566/567

Minolta 9J04203


1) Install the new chip the same way the old chip was installed in the location shown. CAUTION - All chips are static sensitive and can be damaged if subjected to a static discharge.

Note: If the chip you receive only has one hole in it, it is ok to mount the chip using a single screw. If your cartridge utilizes a screw and pin combination instead of two screws, then cut the pin flush to the cartridge and install the single screw.


2) Use a pair of pliers to remove the fill hole plug. The plug can be difficult to remove so work it out a little at a time. Then dump out all the remaining old toner through the fill hole. This toner should not be reused.

3) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the new toner. The whole bottle should be used so the toner level matches the chip. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge. Once refilling is complete, reinstall the fill hole plug.

4) Gently shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

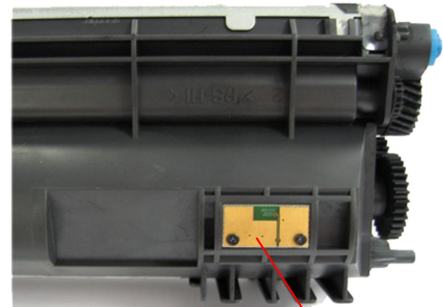

install chip here

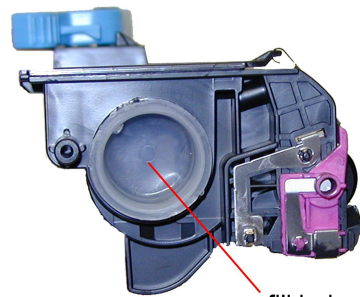

fill hole plug