

# TonerKits

do-it-yourself toner refill kits

support@tonerkits.com

## Standard Refill Instructions

(SF550p sf1.0)


### Samsung SF550D3

1) Use a pair of needle nose pliers or small flat blade screwdriver to pull or pry out the fill hole plug. Try to avoid touching the green photoconductive drum when handling the cartridge.

2) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the new toner. You may use all or part of the bottle as you see fit. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge. Once refilling is complete, reinstall the fill hole plug.

3) Insert a new fuse in the location shown. If you are using a regular replacement cartridge, there will be a slot with a bracket in it that holds the fuse in place. If you are using a starter cartridge, there will be a slot but possibly no bracket to hold the fuse so you will have to use some super glue or tape to secure the fuse in the slot. If using tape, make sure it is only covering the glass part of the fuse. The metal ends must not be covered.

4) Gently shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

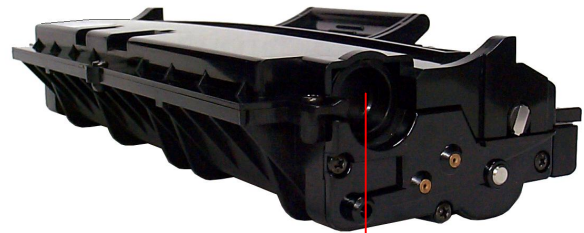

fill hole plug

insert fuse in this slot

Top View



Fast Online Ordering Available 24/7

[www.tonerkits.com](http://www.tonerkits.com)