

TonerKits

do-it-yourself toner refill kits

Request a detailed color copy of these instructions by email at support@tonerkits.com

Standard Refill Instructions

SCX4200 sf3.0

Samsung SCXD4200A MLTD109S MLTD1092S

1) Remove the two side cover screws and gently pry up the side cover tab and remove the side cover. Try to avoid touching the green photoconductive drum when handling the cartridge (Fig. 1).



2) Remove the 5 top cover screws (Fig. 2).



3) Gently pry the back side and front side tabs loose and remove the top cover (Fig. 3&4)

Note: Try to keep the cartridge as flat as possible on the work surface while performing step 3 so no toner spills out of the cartridge.




4) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the whole bottle of new toner. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge.



5) Chip replacement: Install the reset chip the same way the old chip was installed in the location shown. CAUTION - All chips are static sensitive and can be damaged if subjected to a static discharge. (Fig. 5).

6) Reinstall the top cover and screws. Be sure to snap the cover on tightly before installing the screws.

7) Gently shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.

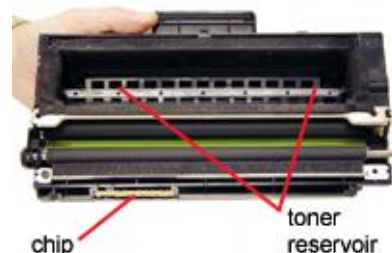

Fast Online Ordering Available 24/7

www.tonerkits.com