

TonerKits

do-it-yourself toner refill kits

Refilling Instructions

Canon 3483B001 3484B001 3500B001 9435B001
HP CB435A CB436A CE278A CE285A CF283A CF283X

1) Use our Universal Hole Tool or other melting device to make a 3/4 inch fill hole in the location shown. Do not allow any small bits of plastic to fall into the cartridge. If using our hole tool, read the operating instructions that came with it.

2) Shake the toner bottle well to aerate and loosen the toner. Then remove the cap and install the pouring spout. Slowly pour in the whole bottle of new toner. Try to avoid squeezing the bottle as it may cause toner to blow out all over the cartridge.

3) Once refilling is complete, clean the area around the fill hole and seal it with a two inch piece of the foil tape that came with the kit. Smooth the tape out well to make a leak proof seal.


4) Chip replacement: Use a utility knife to make a slice in each rail where shown so the chip can slide out. Then slide the old chip out in the direction of the arrow and slide a new chip in. If the chip is loose, use a dab of glue to secure it.

CAUTION - All chips are static sensitive and can be damaged if subjected to a static discharge.

5) Shake the cartridge side to side to level the toner. Then reinstall it in the machine and run some test prints.




3/4" hole cutter tip

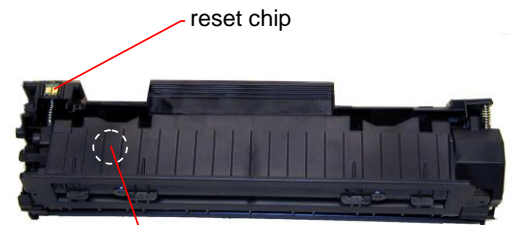

reset chip

make fill hole here
(bottom of cartridge shown)

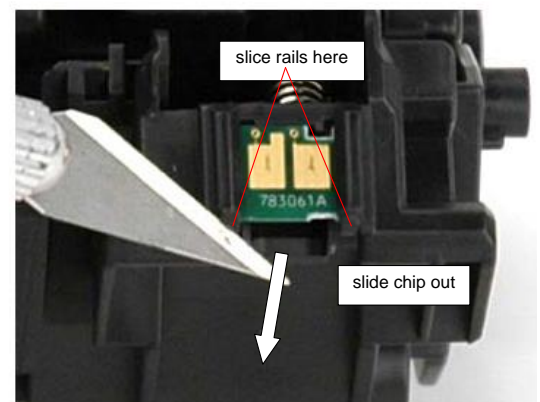

slice rails here

slide chip out

Fast Online Ordering Available 24/7
www.tonerkits.com